 


Gniazda wtykowe i akcesoria

GZT2 (856048) Do R2N 	GZT3 (856049) Do R3N 	GZT4 (856050) Do R4N 	GZP4 (864324) Do R2N, R4N 
GZM2 (857440) Do R2N 	GZM3 (857412) Do R3N 	GZM4 (857436) Do R4N 	 GZP4-0400 GZT4-0040 G4 1052  MP15 M... ZGZP4-2 ZGZP-2  ZGGZ4 ZGZP4-8
GZ4 (2000538) Do R4N 	GS4 (2613504) Do R4N 	GZ2 (2000553) Do R2M 	
 G4 1052	 GS4-0036 GS4-0035	 GZ2 1060	
SU4/2D (592051) Do R2N 	SU4D (592049) Do R4N 	SU4/2L (592050) Do R2N 	SU4L (592048) Do R4N 
 G4 1053		 G4 1053	 G4 1040
G4/2 (592057) Do R2N 	G4 (592056) Do R4N 	S2M (592065) Do R2M 	G2M (592064) Do R2M 
 G4 1053		 G4 1050	 G4 1050 G2M 1020

KODY DO ZAMÓWIEŃ:

Moduły sygnalizacyjne / przeciwprzepięciowe - patrz str. 56.
Złącza grzebieniowe - patrz str. 57.



Gniazda wtykowe i akcesoria

PZ8 (592005) Do R15 - 2P   PZ11 0031	PZ11 (592001) Do R15 - 3P 	GZU8 (592031) Do R15 - 2P   GZU 1052	GZU11 (592035) Do R15 - 3P 
GZ8 (592012) Do R15 - 2P   GZ 1050	GZ11 (592017) Do R15 - 3P 	GZP8 (2613505) Do R15 - 2P   GZP-0054	GZP11 (2613506) Do R15 - 3P   GZP-0035  21, 41  COM3
GZ14U (592027) Do R15 - 4P 	GZ14 (592022) Do R15 - 4P   GZ14 0737	GZ14Z (858866) Do R15 - 4P 	GZ14P (864515) Do R15 - 4P 
GOP8 (592067) Do R15 - 2P   R159 1051	GOP11 (592069) Do R15 - 3P 	GOP14 (592071) Do R15 - 4P   R15 0736	GUC11S-VO (862593) Do RUC, RUC-M   MBA

